## **INSTALLATION INSTRUCTIONS**



alCove

KCV SERIES Cove Heater



READ ALL WIRE SIZING, VOLTAGE REQUIREMENTS AND SAFETY
DATA TO AVOID PROPERTY DAMAGE AND PERSONAL INJURY











## WARNING



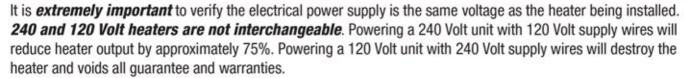

CAUTION: Turn off power source supplying heater before attempting any installation, maintenance or repairs. Lock or tag circuit breaker/fuse panel door. Failure to do so could result in serious electrical shock, burns or possible death.

**WARNINGS:** To insure proper operation of this heater it should be a minimum of 6 feet above the floor and no closer than  $2\frac{1}{2}$ " below drywall ceiling (6" vinyl or drop ceilings). Draperies should clear the front and the top of this heater by 6". Draperies hung below the heater should have a  $2\frac{1}{2}$ " clearance. Do not block the heater in any manner. Never paint the heater.

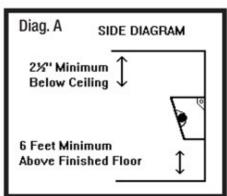

## **MAINTENANCE & WARRANTY**

Following the guidlines herein listed will result in a maintenance-free heater. There are no moving parts or motors to maintain. Periodic dusting of the front panel is all that is suggested.

The KCV Cove Heater carries a (2) warranty form date of installation. Please refer to the manufacturer's warranty statement for further information.

## **GENERAL INFORMATION**

Cove heaters are completely assembled and pre-wired. To prepare the heater for installation, carefully check the voltage to be used is the same as stated on the rating nameplate. Operating voltage can not exceed 5% of nameplate voltage. Operating heater above listed voltage ratings voids all gaurantees and warranties.

(UL)	KING ELECTRICAL MFG. CO. SEATTLE, WA UL USTED AR HEATER 827J CLEARANCE " ABOVE TOP OF ANY I	MODEL WATTS	KCV1202	
			210/	
			120/	A

DO NOT INSTALL LESS THAN 6 FT. ABOVE FLOOR & 2 1/2" FROM CEILING.